


Side Skirt Decals Instructions






Dry with a micro-fiber.

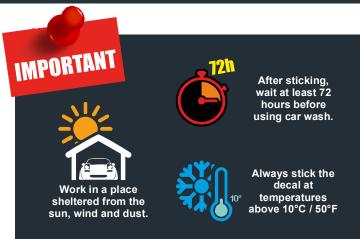

Present the decal at the desired location.




Fix the adhesive to its final position with several scotch pieces.

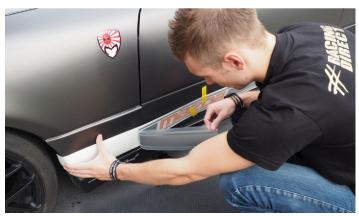

Remove a first part of the sticker of its support.



Remove the white support and wet thoroughly the adhesive part of the sticker and the bodywork. Use only water WITHOUT SOAP!

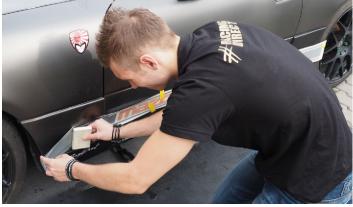


Apply the sticker very strongly to the body with a spatula or similar.



Once the front of the sticker is glued, the same procedure is reproduced on the back of the sticker in increments of 60 to 80 cm.




Side Skirt Decals Instructions

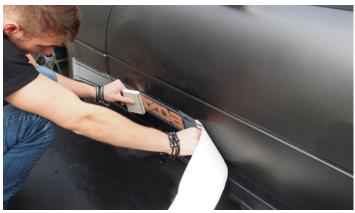

...remove the white support, wet abundantly sticker and body and apply the stick with spatula...



Repeat the procedure until the end of the sticker.

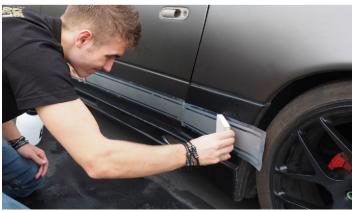

Thoroughly press to remove water and air bubbles.




Remove the transfer film very gently.


The sticker must remain glued to the body.



Locate the water and air bubbles and chase them with a spatula.

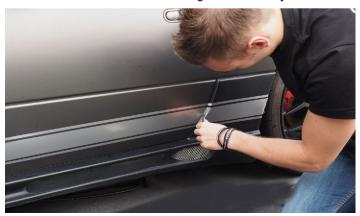

Cut the sticker to the right of the door seals and stick the decal to the inside of the doors.

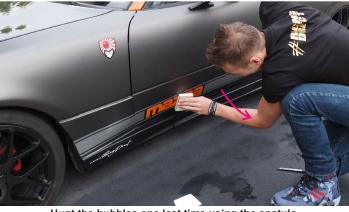

Hunt the bubbles one last time using the spatula.

Leave to dry 2 hours before taking the road.



Lacing Direct